

LER 9199 — Dizzy Fun Land

[www.learningresources.com](http://www.learningresources.com)

© Learning Resources, Inc., Vernon Hills, IL 60061 (USA)

There's no waiting in lines at this amusement park! Build the rides shown in this guide or make your own custom creations! There is no wrong way to build. Just follow these instructions to help you get started.

Note: Before you begin, make sure you have 2 new "AA" batteries in the motor's red hand control. See the last page in this guide for more information on proper battery care.

¡No hay que esperar en colas en este parque de diversiones! ¡Construya los recorridos que aparecen en esta guía o haga sus propias creaciones especiales! No hay ningún modo de crear que sea incorrecto. Sólo tendrá que seguir estas instrucciones como ayuda para ponerse en marcha.

 
Nota: Antes de comenzar, asegúrese de que tiene dos baterías "AA" nuevas en el control de mano derecha del motor. Vea la última página de esta guía para obtener más información sobre el cuidado adecuado de las baterías.

Kein Warten in langen Schlangen bei diesem Vergnügungspark! Bauen Sie die in dieser Anleitung gezeigten Bahnen oder entwerfen Sie Ihre eigenen Kreationen! Es gibt keine falschen Aufbauideen. Befolgen Sie als Starthilfe einfach die Anleitungen.

Hinweis: Bevor Sie anfangen, vergewissern Sie sich, dass zwei neue „AA“ Batterien in der roten Handsteuerung des Motors eingebaut sind. Auf der letzten Seite dieser Anleitungen finden Sie zusätzliche Informationen zur Batteriepflege.

Aucun besoin de faire la queue pour ce parc d'attractions. Construis les manèges présentés dans ce guide ou tes propres créations ! Il n'y a pas de mauvaise façon de construire le manège. Tu n'as qu'à suivre ces instructions pour t'aider au début.

Note : Avant de commencer, assure-toi d'avoir 2 nouvelles piles 'AA' dans le contrôle manuel rouge du moteur. Consultez la dernière page du guide pour plus d'information sur l'entretien des piles.

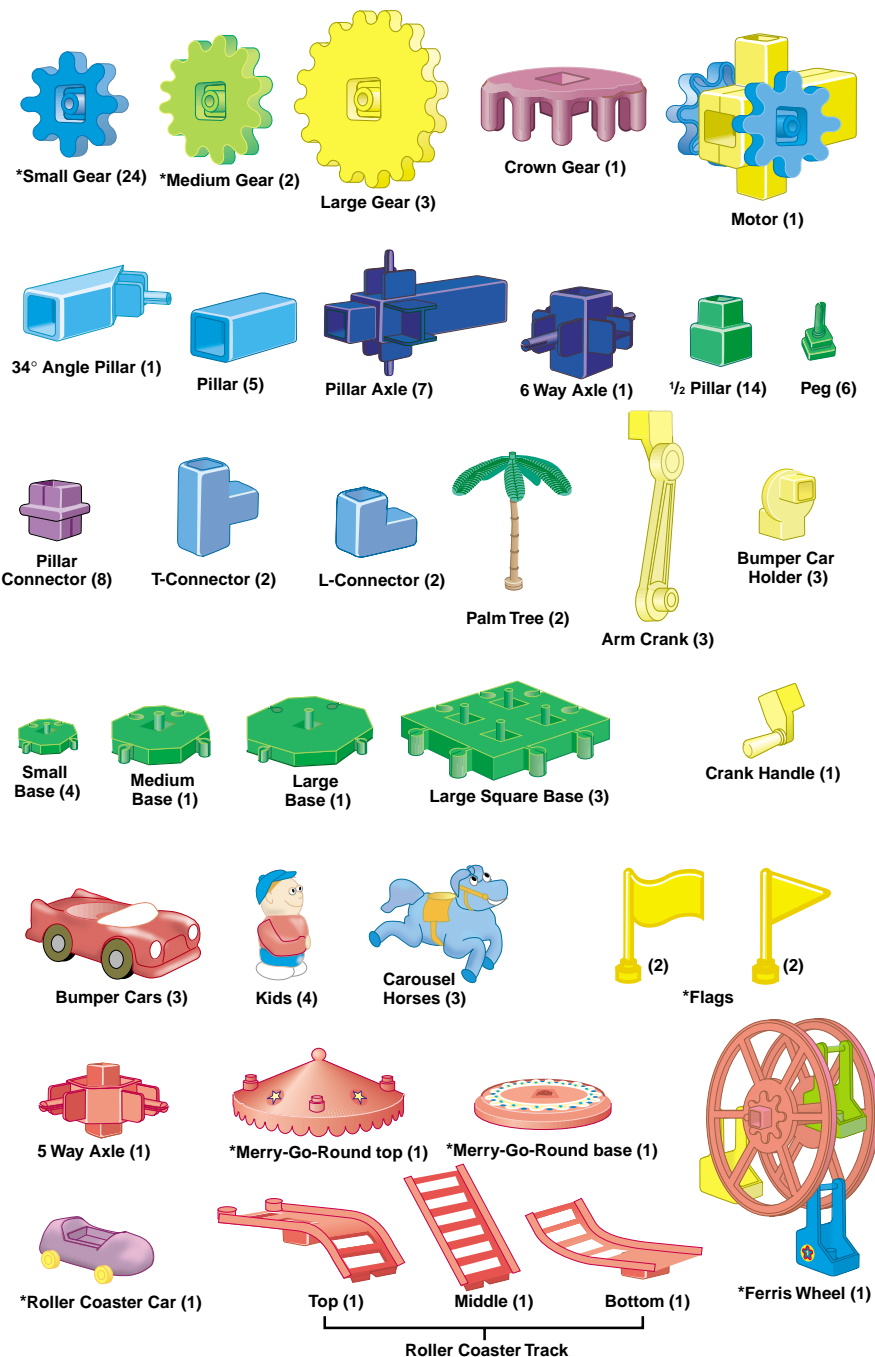

1 Sheet of Stickers \* Stickers are applied to these pieces. See front of box for placement.



## BUMPER CARS

 
### STEP 1

Join two square bases.

**Building Hint:**  
Try to build from the base up.

### STEP 2

Add eight small gears.

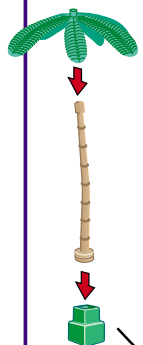

### STEP 4

Put the cars on the gears.

 
### STEP 5

Put a palm tree on the last gear. It will turn as the cars go around.

DIZZY FUN LAND is built in sections. The completed rides will be joined together in the last steps.

### STEP 3

Build three cars.

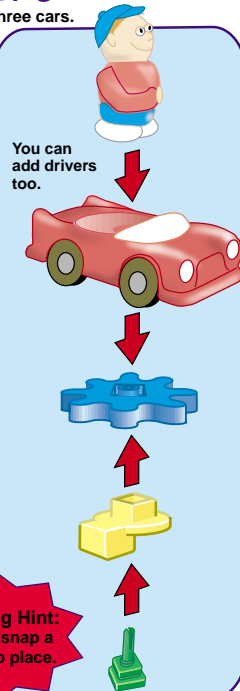

You can add drivers too.

**Building Hint:**  
Always snap a peg into place.

All the cars gears should move together. You have finished the first ride.




## MERRY-GO-ROUND
 
### STEP 1

Build a tower to hold the horses.


The Ferris wheel will attach here.

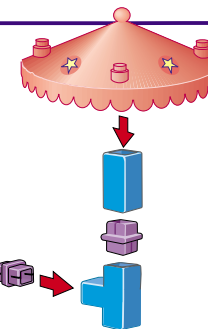

Snap a peg inside 1/2 pillar above.

### STEP 2

 Build three carousel horses with gears.

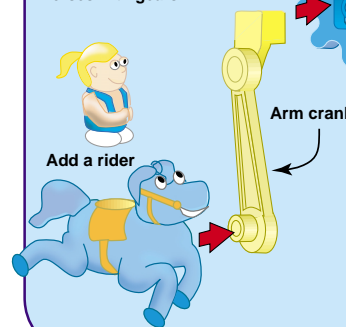

Add a rider

 
Arm crank

Large gear

Large base

Small gear

Small base

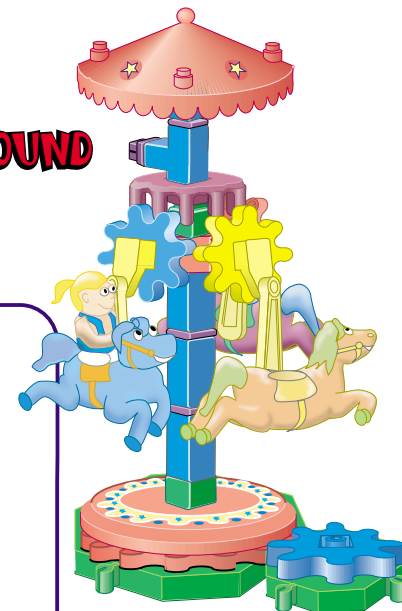


(Step 2)

(Step 2)




## STEP 1

 Build this support on the base. The motor should turn this gear and the three gears on the base.

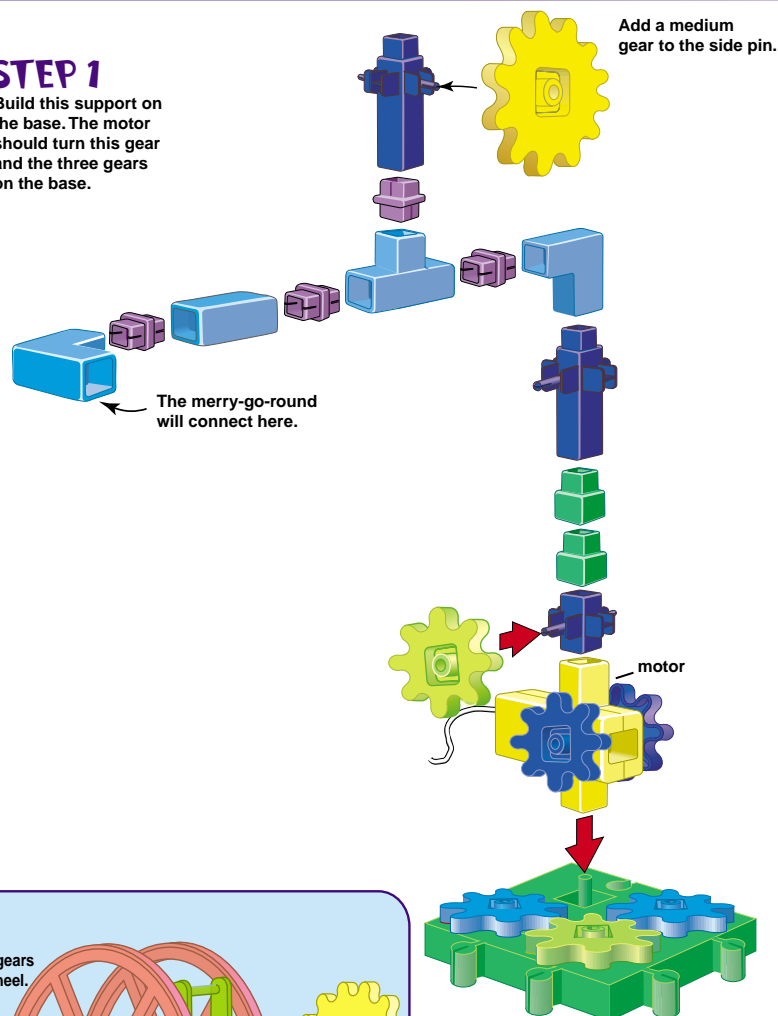

## STEP 2

 
Add two large gears to the Ferris wheel.

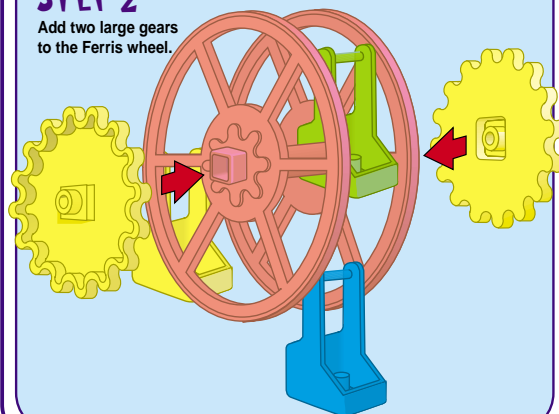

Put three small gears on a square base.

## STEP 3

 Attach this side of the Ferris wheel to the support you built in Step 1.

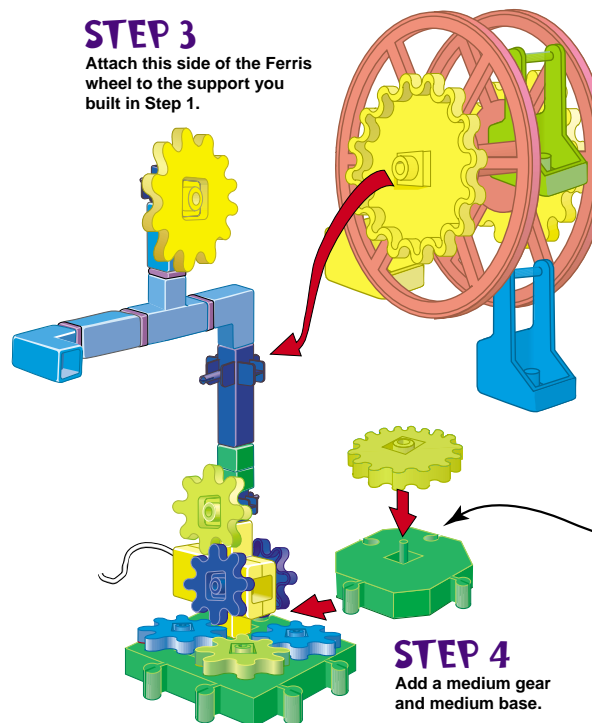

## STEP 4

Add a medium gear and medium base.

## STEP 5

 
Build this support for the other side of the Ferris wheel.

## STEP 6

Attach the center of the other side of the Ferris wheel to this pin.


## STEP 7

Attach this small base to the medium base.

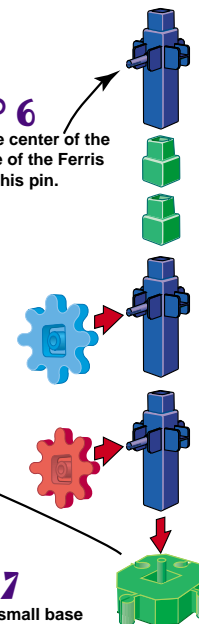

# DIZZY FUN LAND™
 
## FERRIS WHEEL

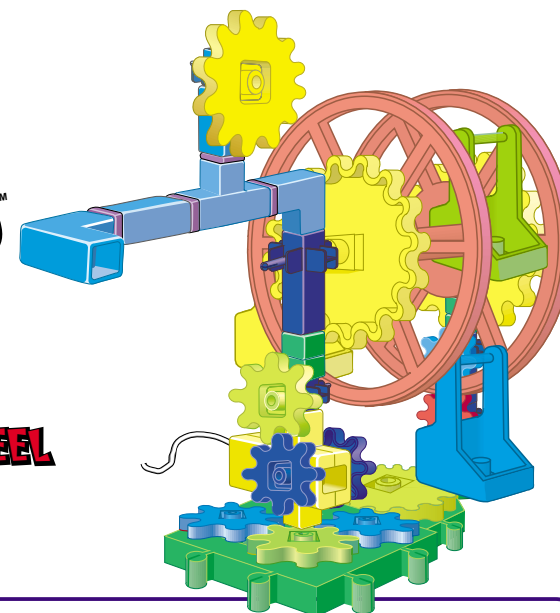






## ROLLER COASTER


### STEP 1

 Build the support for the top of the roller coaster track.

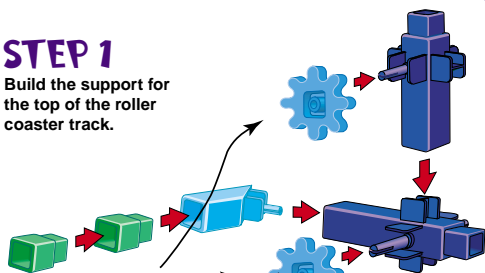


### STEP 2

 Add two small gears and a hand crank.

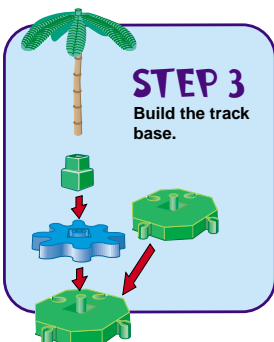


### STEP 3

 Build the track base.

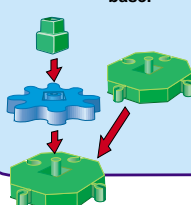

### STEP 5

 Add two flags.

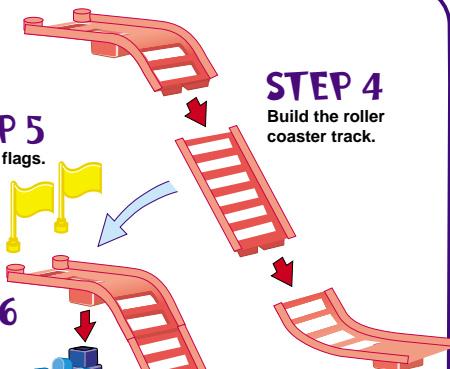


### STEP 4

Build the roller coaster track.

### STEP 6

 Attach the support.

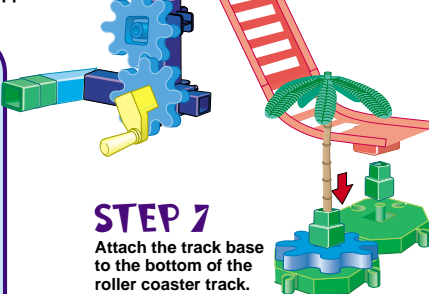


### STEP 7

Attach the track base to the bottom of the roller coaster track.




### STEP 8

 Attach the track support to the Ferris wheel.

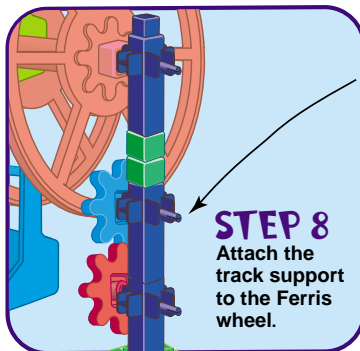


## PUT ALL THE SECTIONS TOGETHER

 Join the Ferris wheel and roller coaster track to the merry-go-round.

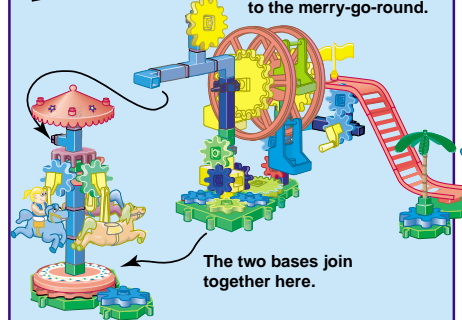


The two bases join together here.

 Next add the bumper cars.

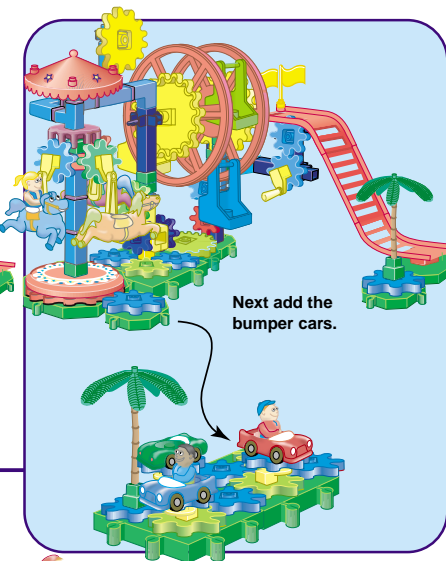

Add flags to the top of the merry-go-round and roller coaster.

 Put a car and driver on the top.

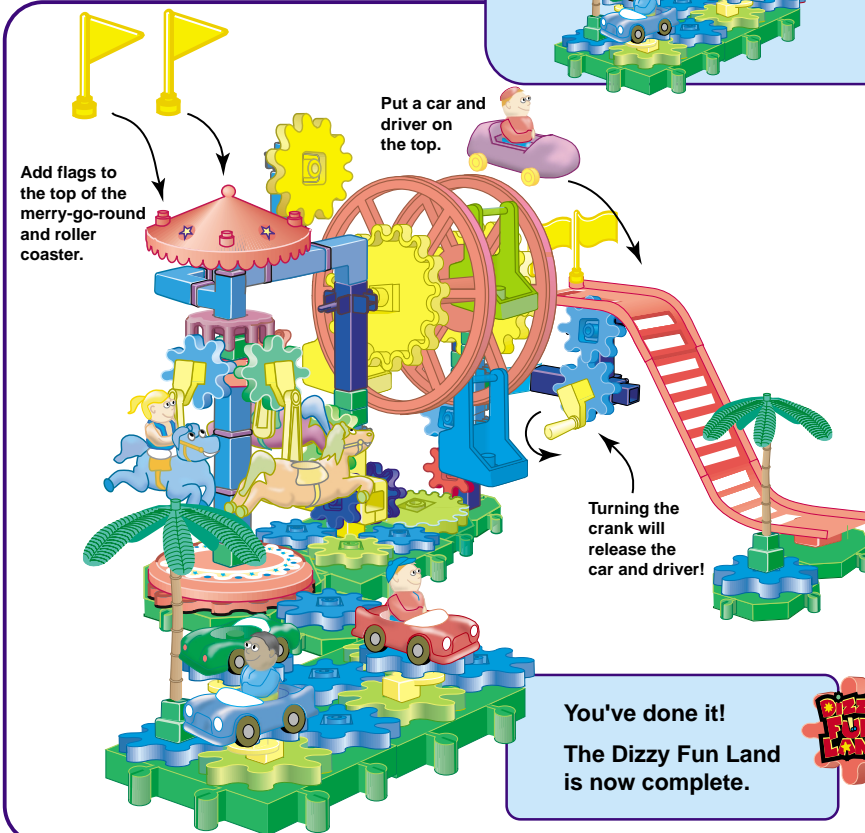


Turning the crank will release the car and driver!

You've done it!  
The Dizzy Fun Land is now complete.



 
Now use the pieces from your Dizzy Fun Land Amusement Park to build the following models one at a time.

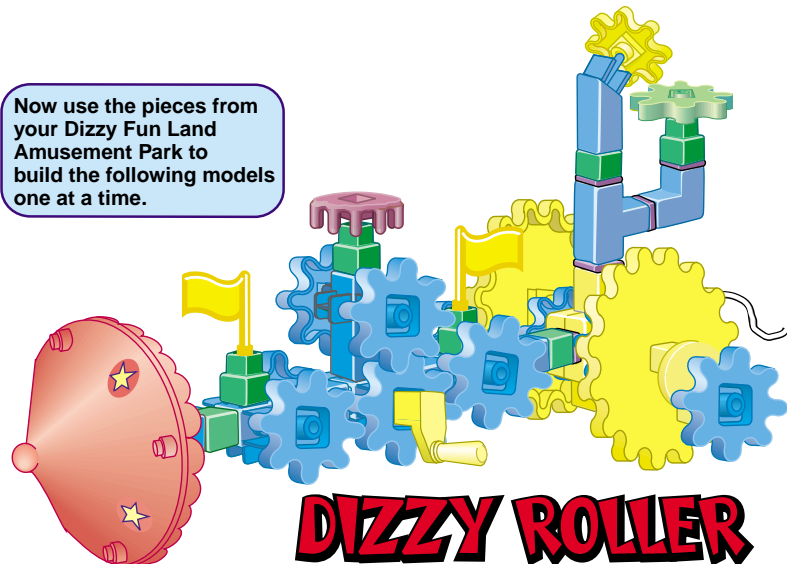

## DIZZY ROLLER


### STEP 1

 Start by building a support.

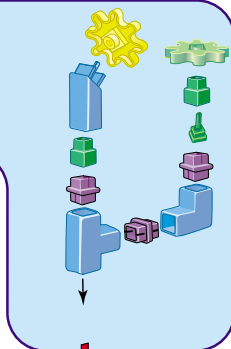


### STEP 2

 Place the support on the motor and add more pieces to the front.

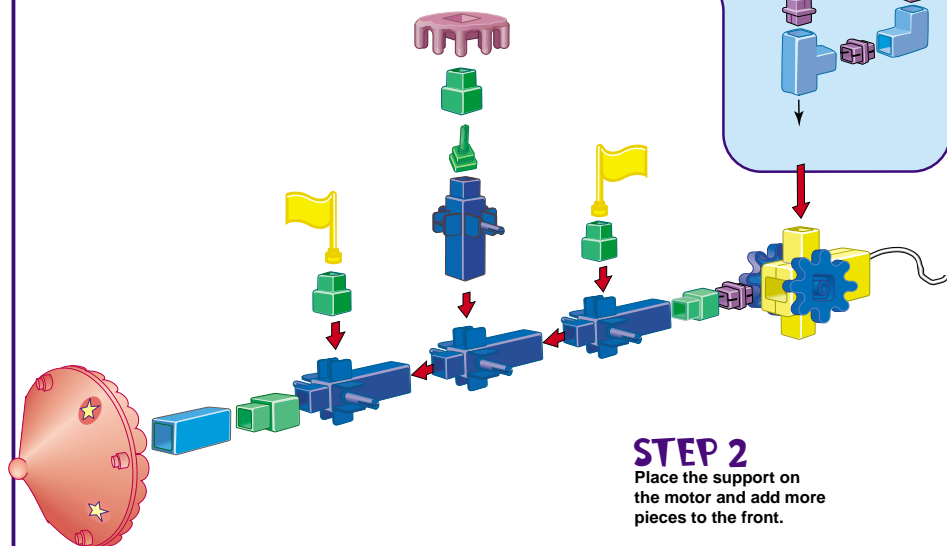


### STEP 3

 Build a pair of wheels using large gears.

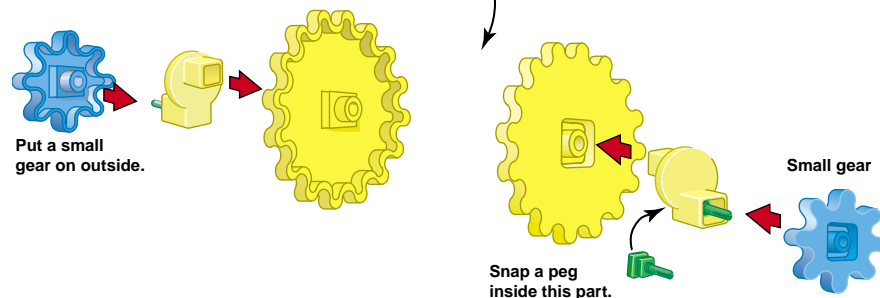

### STEP 4

 Add four small gears to each side. Add handle to one gear as shown.

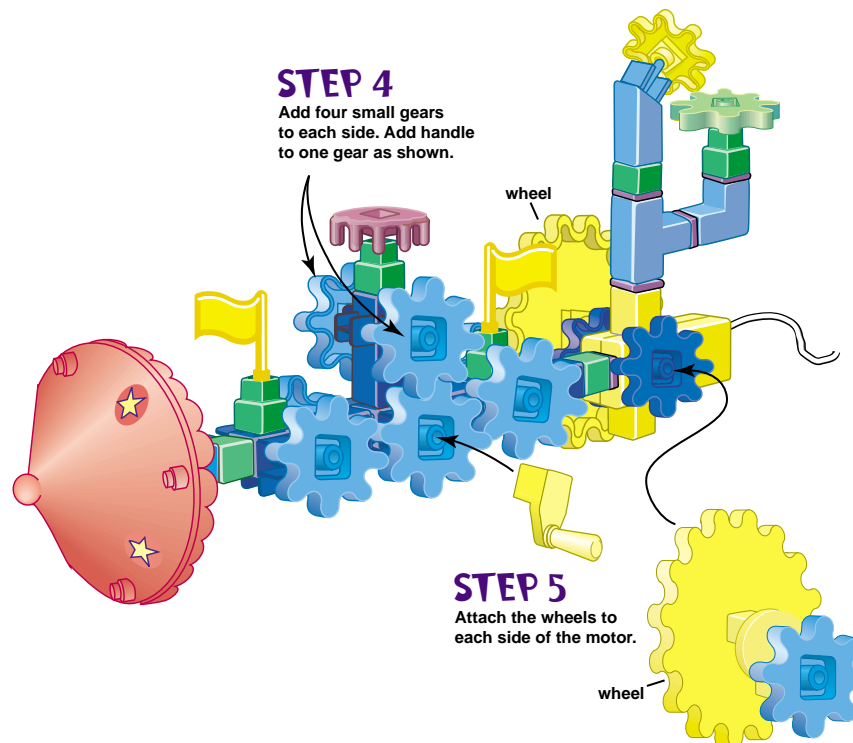

### STEP 5

Attach the wheels to each side of the motor.

wheel

# DIZZY ROBOT

**STEP 1**  
Start by building  
a pair of legs.

**STEP 2**  
Add two flags  
to the top of  
the legs.

**STEP 3**  
Add arm cranks  
to each legs.

**STEP 4**  
Join the legs  
together with the  
motor in the middle.

**STEP 5**  
Add an extra gear  
to the motor in front.

**STEP 6**  
Attach three  
gears to each leg.

**STEP 7**

Add six more gears to the back,  
three on each leg.

The motor should  
turn all the gears.

**STEP 8**  
Build the head.

**STEP 9**  
Put a small gear  
on the back of  
the head.

 
**STEP 10**

Attach merry-go-round base,  
peg,  $\frac{1}{2}$  pillar and medium  
gears to the extra gear on  
the front of the motor.



## STEP 1

Build a square frame with pillar axles and a motor.


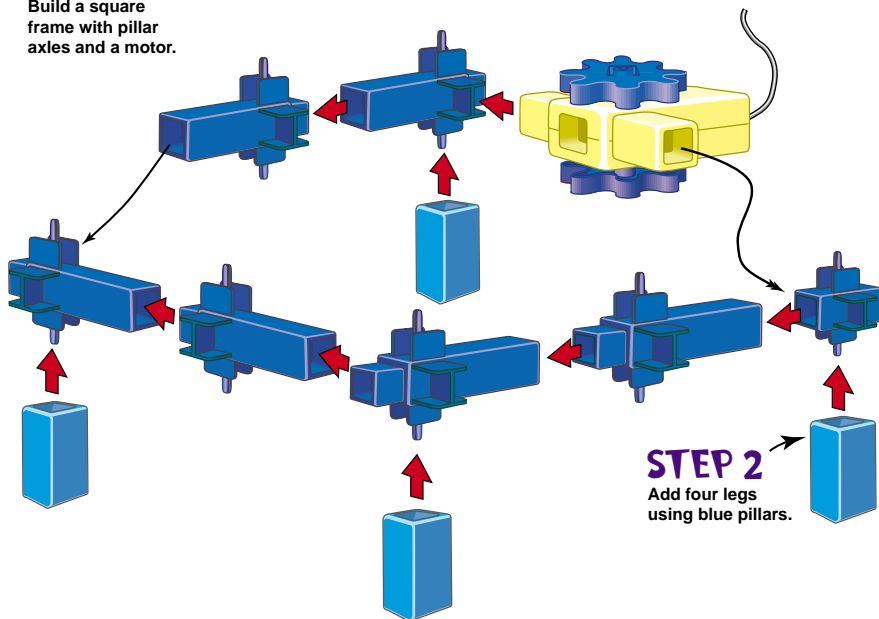


## STEP 2

Add four legs using blue pillars.

## STEP 3

  Add seven small gears to the top of the frame so that it looks like this.

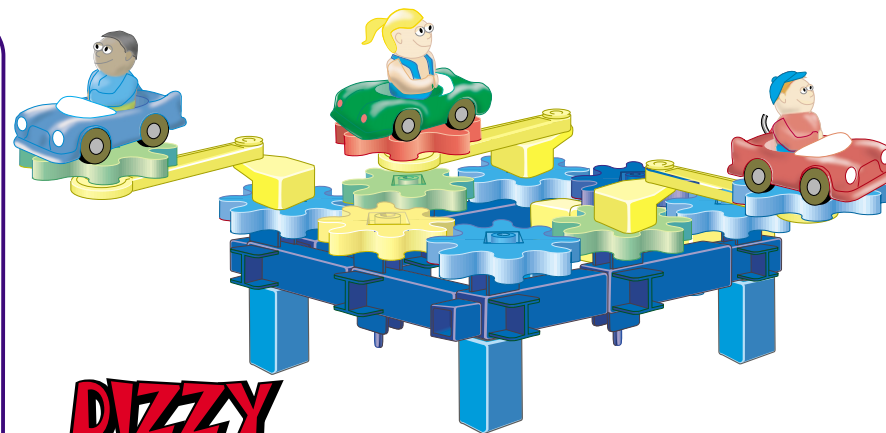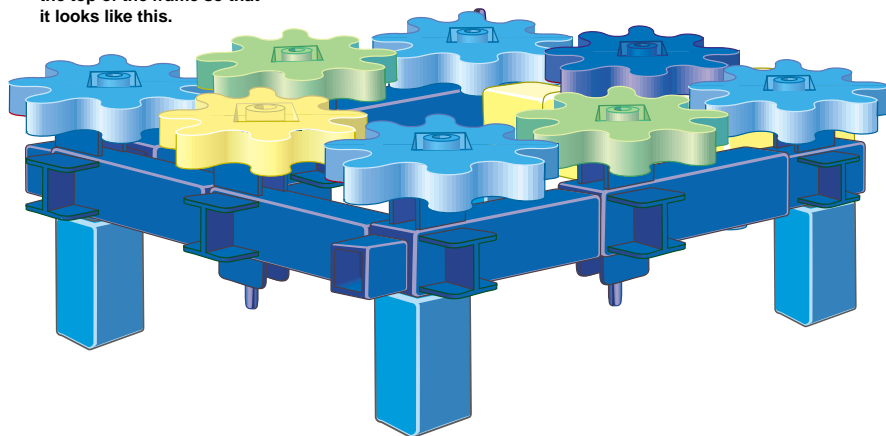


# DIZZY SWINGING CARS




## STEP 4

 Make three cars with drivers on small gears and arm cranks.

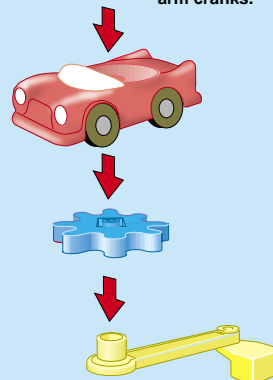

## STEP 5

 Attach arm cranks on the bottom of the cars to the gear base as shown here.

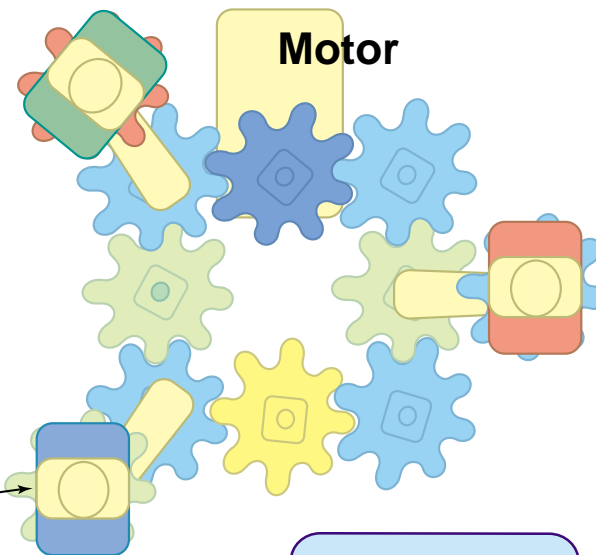

Turn on the motor for dizzy swinging car action.

**CAUTION:**

- Use only 2 "AA" batteries.
  - To remove batteries, slide cover off hand-control (See arrow). Remove old batteries and replace with new batteries. Be sure to insert batteries correctly according to (+) and (-) symbols on battery compartment.
  - Be sure to insert batteries correctly with adult supervision and always follow the toy and battery manufacturer's instructions.
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Rechargeable batteries are to be removed from the toy before being charged.
  - Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - The supply terminals are not to be short-circuited.
  - Always remove weak or dead batteries from the product.
  - Remove batteries if the product will be stored for an extended period of time.
  - Check the cord frequently and do not use if wire is damaged or exposed.
- Please retain these instructions for future reference.

**Mise en garde:**

- Utilisez seulement 2 piles 'AA'.
  - Pour retirer les piles, glisse le couvercle pour le sortir du contrôle manuel (voir la flèche). Retire les vieilles piles et remplace-les avec des neuves. Assure-toi d'insérer les piles correctement en suivant les symboles (+) et (-) dans le compartiment de piles.
  - Insère les piles correctement avec l'aide d'un adulte et suis toujours les instructions du fabricant de piles et du jouet.
  - Ne mélange pas les piles, nouvelles et vieilles.
  - Ne mélange pas de piles alcalines, standard (carbone-zinc) ou rechargeables (nickel-cadmium)
  - Tu dois retirer les piles rechargeables du jouet avant de les recharger.
  - Les piles non-rechargeables ne peuvent pas être rechargées.
  - Les piles rechargeables doivent être chargées seulement sous la supervision d'un adulte.
  - Tu dois utiliser seulement les types de piles recommandées ou l'équivalent.
  - Il ne faut pas court-circuiter les bornes d'alimentation.
  - Retire toujours les piles faibles ou mortes du produit.
  - Si tu prévois ranger le produit pendant assez longtemps, retire les piles.
  - Vérifie souvent le cordon et ne l'utilise pas si le fil est endommagé ou exposé.
- Conserve ces instructions pour référence ultérieure.

**Vorsicht:**

- Nur 2 „AA“ Batterien verwenden.
- Zum Entfernen der Batterien, schieben Sie zunächst die Abdeckung von der Handsteuerung (siehe Pfeil). Entfernen Sie die alten Batterien und ersetzen Sie sie mit neuen. Beachten Sie dabei die korrekte Lage der Batterien entsprechend der (+) und (-) Symbole am Batteriefach.
- Die Batterien müssen korrekt unter Aufsicht Erwachsener eingelegt werden; befolgen Sie stets die Anleitungen der Spielzeug- und Batteriehersteller.
- Verwenden Sie nie alte und neue Batterien zusammen.
- Verwenden Sie nie Alkali- oder Standardbatterien (Kohle-Zink) bzw. aufladbare Akkus (Nickel-Kadmium) zusammen.
- Aufladbare Akkus müssen vor dem Aufladen aus dem Spielzeug entfernt werden.
- Nicht aufladbare Batterien dürfen nicht geladen werden.
- Aufladbare Akkus dürfen nur unter Aufsicht Erwachsener geladen werden.
- Nur Batterien der gleichen Type oder einer empfohlenen gleichwertigen Type verwenden.
- Die Versorgungsklemmen nicht kurzschließen.
- Schwache oder leere Batterien immer aus dem Produkt entfernen.
- Entfernen Sie die Batterien, wenn Sie das Produkt für längere Zeit aufbewahren.
- Überprüfen Sie das Kabel regelmäßig und verwenden Sie es nicht, wenn ein Draht beschädigt oder frei ist.

**PRECAUCIÓN**

- Use sólo 2 baterías "AA".
  - Para retirar las baterías, deslice la cubierta hacia afuera del control manual (vea la flecha). Retire las baterías usadas y reemplácelas con otras nuevas. Asegúrese de insertarlas correctamente de conformidad con los signos (+) y (-) que se muestran en el compartimiento correspondiente.
  - Asegúrese de insertar las baterías correctamente con supervisión de un adulto y siga siempre las instrucciones de los fabricantes de los juguetes y las baterías.
  - No mezcle baterías nuevas con otras usadas.
  - No combine baterías alcalinas con otras estándar (carbono-zinc) o recargables (níquel-cadmio).
  - Las baterías recargables se deberán retirar del juguete antes de cargarlas.
  - Las baterías no recargables no se deberán volver a cargar.
  - Las baterías recargables sólo se deberán cargar bajo supervisión de adultos.
  - Sólo se deberán utilizar baterías del mismo tipo u otro equivalente que se recomiende.
  - Las terminales de alimentación no se deberán poner en cortocircuito.
  - Retire siempre del producto las baterías débiles o agotadas.
  - Quite las baterías si se va a almacenar el producto durante un periodo prolongado.
  - Inspeccione el cable con frecuencia y no use el producto si está dañado o al desnudo.
- Tenga la bondad de conservar estas instrucciones para consultas futuras.

LRM9199-